

Historic, archived document


Do not assume content reflects current scientific knowledge, policies, or practices.



391801


Repair Your **ELECTRIC CORDS**

... PREPARING WIRES FOR RECONNECTION

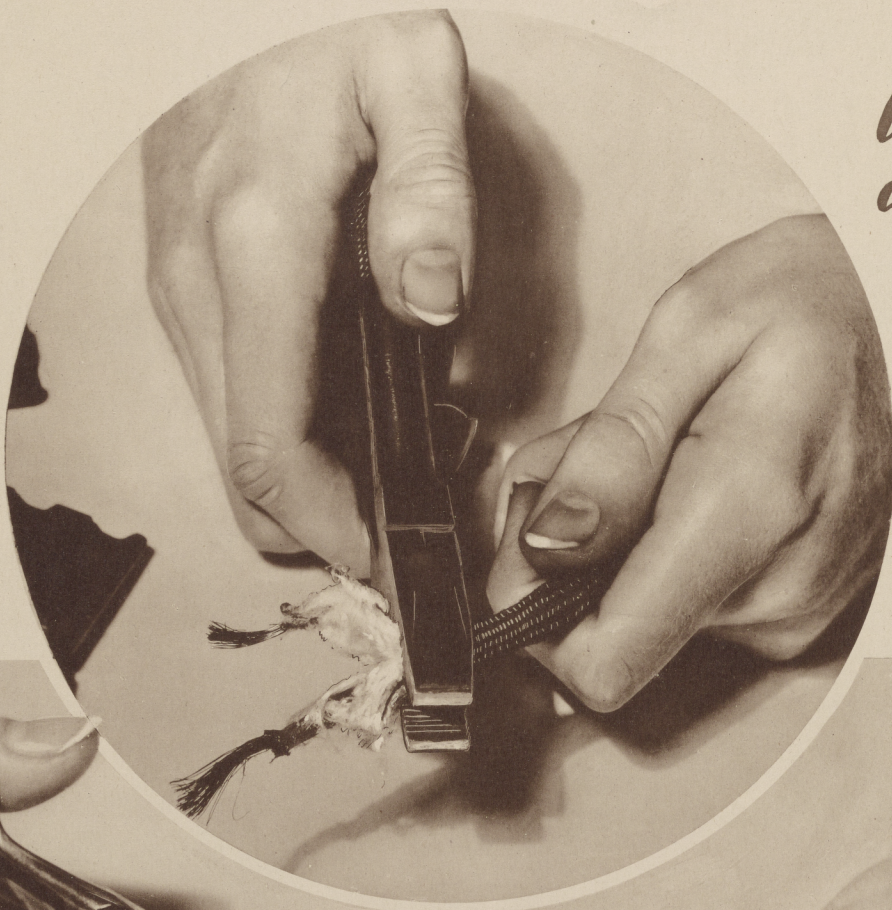


*Always disconnect
cord before you
start to work
on it -*

① Remove plug.... then
cut off damaged
end of cord.

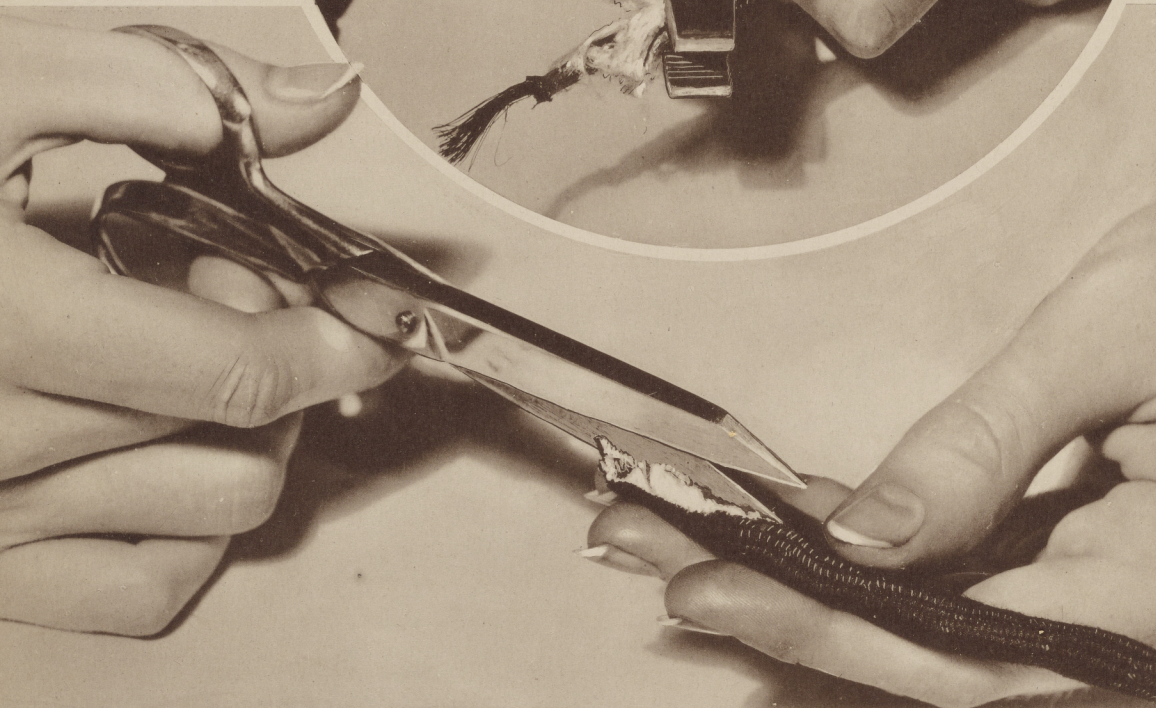

② Slit and cut the
outer covering
about 3 inches for
appliance plug....
2 inches for outlet
plug.

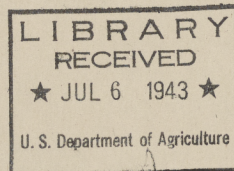

③ Wrap with thread
or tape to pre-
vent fraying.

